



## **Does the suspension need to have the air dumped every time I unload?**

The manufacturer always recommends dumping the air when unloading. The reason being that the air bags will over fill when the load is quickly unloaded potentially damaging the airbags by over filling. It is possible that when loads are slowly unloaded that the air exchange will be slow enough to prevent the over filling of the air bags.

See Your Local TimpTe Branch For All Your Parts And Service Needs!

© 2011 TimpTe Inc.

[www.timpTe.com](http://www.timpTe.com)