




## How do I operate my EASY FLOW hydraulic door operator?

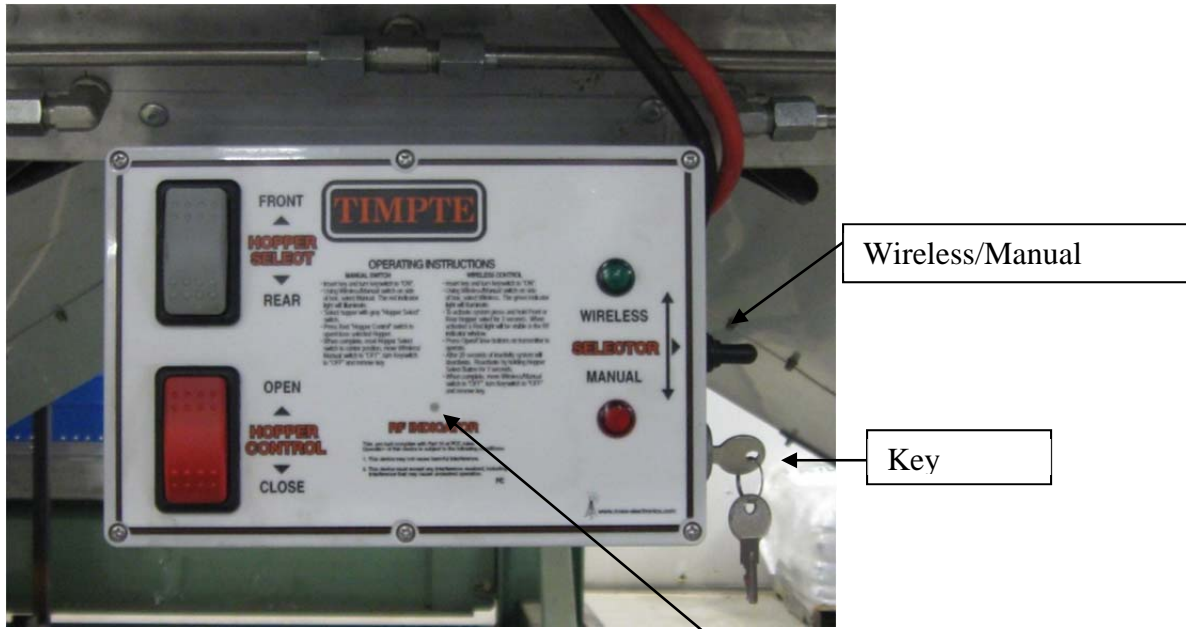


### MANUAL OPERATION

1. Turn on Master Disconnect Switch in tractor
2. If key: Insert Key and turn key switch to "ON"
3. If Wireless/Manual switch on side of box, select "Manual".
4. Select hopper with "Hopper Select" switch.
5. Use "Hopper Control" switch to open/close selected Hopper.
6. When complete, reset Hopper Select switch to center position, move Wireless/Manual switch to "OFF" position, if key: turn Key switch to "OFF" and remove key. (Recommended)

See Your Local Timpte Branch For All Your Parts And Service Needs!

© 2011 Timpte Inc.

[www.timpte.com](http://www.timpte.com)

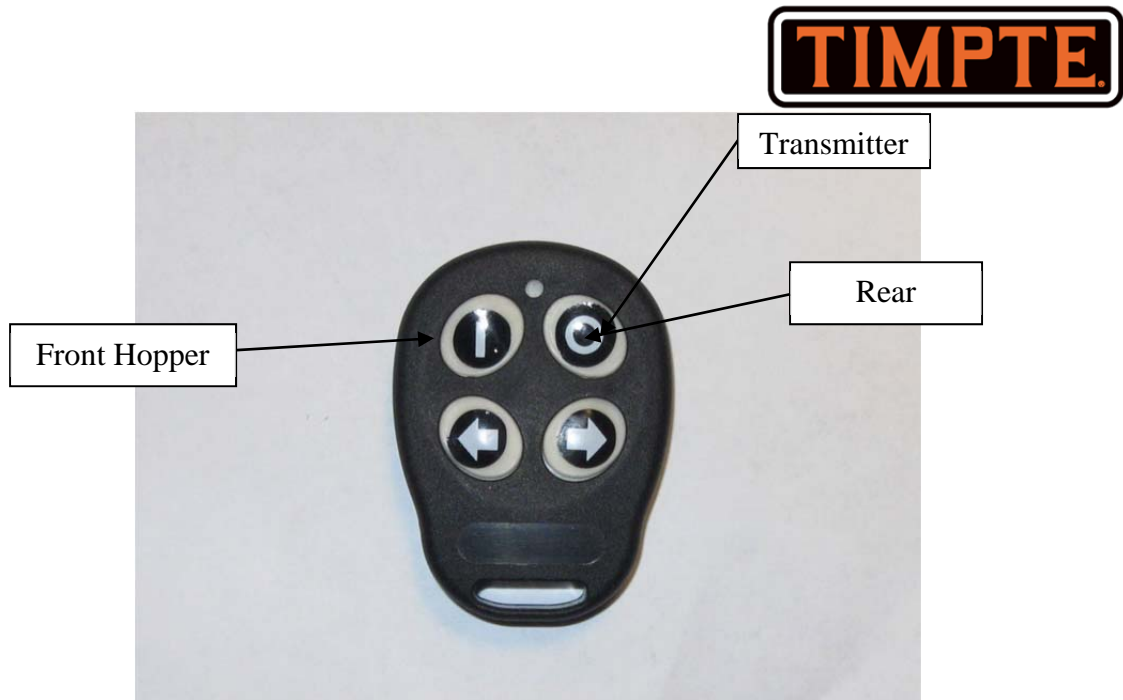

### **WIRELESS OPERATION FOR 4 BUTTON REMOTE**

1. If key: Insert Key and turn key switch to "ON"
2. Use Wireless/Manual switch on side of box, select "Wireless".
3. To activate system press and hold Front or Rear Hopper select on transmitter for three (3) seconds. When activated a Red light will be visible in the RF indicator Window.
4. Select hopper you wish to activate. **(NOTE: DEFAULTS TO REAR HOPPER)**
5. Press Open/Close button on transmitter to operate selected hopper door.
6. After twenty (20) seconds of inactivity system will deactivate. Reactivate by holding Hopper Select button on transmitter for three (3) seconds.
7. When complete move Wireless/Manual switch to "OFF", turn Key switch to "OFF" and remove key.(Recommended)

See Your Local Timpte Branch For All Your Parts And Service Needs!

© 2011 Timpte Inc.

[www.timpte.com](http://www.timpte.com)



## **WIRELESS OPERATION FOR 7 BUTTON REMOTE**

1. Press and hold "Power" button" on remote for 3 seconds.
2. Press "Enable" button on remote to active hopper buttons.
3. Press open or close for the hopper you wish to open/close.
4. NOTE: Enable button remains active for 20 seconds. After 20 seconds the "Enable Button" will need to be activated before Hopper Selection Buttons will be activated.
5. Power down transmitter by holding "Power" button" for 3 seconds or the transmitter will turn off after 5 minutes of non usage.

See Your Local Timpte Branch For All Your Parts And Service Needs!

© 2011 Timpte Inc.

[www.timpte.com](http://www.timpte.com)