



Why Does my ABS Light Turn on and Stay on?

The ABS status indicator light is located on the driver side of the trailer near the rear corner post. It indicates the system status upon initial startup by turning off once the vehicle starts to move. If a malfunction in the ABS system occurs, the ABS system status light will come on and stay on until the problem is repaired. Anytime the system status light comes on, have the ABS system serviced as soon as possible.

*Note: One very common problem is that a wheel sensor has become misaligned with the tone ring. This can be corrected by carefully pushing the wheel sensor inward against the tone ring on the wheel hub.

See Your Local TimpTe Branch For All Your Parts And Service Needs!

© 2011 TimpTe Inc.

www.timpTe.com