



Pneumatic Vibrator Troubleshooting

1. Vibrator will not start:
 - a. Check to see that quick-opening valve on the vibrator isn't plugged.
 - b. Vibrator should be within 5 feet of operating valve.
 - c. Be sure vibrator has adequate air pressure and volume available.
 - d. Check for broken or missing spring.
2. Vibrator is sluggish and slow to start.
 - a. Check for adequate lubrication.
 - b. Check for leaking airline or defective operating valve.
 - c. Check air supply for pressure and volume.
 - d. Scale or other contaminants may need to be removed from interior.

Caution: Do not exceed 80 psi. Non-warrantable damage to vibrator may occur.

See Your Local TimpTe Branch For All Your Parts And Service Needs!

© 2011 TimpTe Inc.

www.timpTe.com